



A Watch You Can Trust

**INSTRUCTION MANUAL FOR
WATCH CALIBRE
Z020**



WARNING



THIS PRODUCT CONTAINS A BUTTON BATTERY

If swallowed or placed inside any part of the body, the battery can cause severe or fatal injuries within 2 hours or less.

Button batteries are hazardous whether new or used. Keep batteries out of reach of children.

If you think the battery may have been swallowed or placed inside any part of the body, seek immediate medical attention. Contact the Australian Poisons Information Centre immediately on 13 11 26 (New Zealand 0800 764 766) for 24 / 7 fast, expert advice.

Instruction Manual

LORUS


ANALOGUE QUARTZ WITH EL BACKLIGHT

LORUS

■ CHARACTERISTICS

1. Analogue time display
2. Illuminating light
This watch is equipped with the electro luminescent backlight.

■ HOW TO USE NON-CALENDAR MODEL

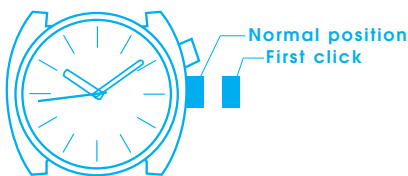

Pull the crown OUT to the FIRST click and set the time. Then push the crown IN.

Note: When you set the time, first set the minute hand to a properly advanced time, then return the minute hand to the correct time by turning it COUNTERCLOCKWISE.

■ HOW TO USE DAY/DATE MODEL

The day of the week can be displayed bilingually (English/another language) and you can select either.

1. How to set the day and date



Pull out the crown to the first click position. (The crown of this watch can be pulled out to the second click position.)

Turn the crown and set the previous day and date. (The day and date can be selected alternatively and displayed in English or the other language.)

Pull out the crown to the second click position and set the present day and date by turning the minute hand.

2. How to set the time



Pull out the crown to the second click position and the second hand stops. The second hand should be stopped on 12 o'clock position.

Turn the crown and set the desired time.

Push the crown in to the normal position in accordance with a time signal.

- Be sure to check that the AM/PM is correctly set. (The day and date are designed to change once every 24 hours.)
- To adjust the correct time for a quartz watch, it is necessary to advance the minute hand 4 or 5 minutes ahead of the correct time and then turn it counterclockwise to set the designated time.

■ BATTERY CHANGE

The watch is powered by two batteries; one to power the analogue quartz movement and the other to turn the electro luminescent backlight on. As the batteries are inserted at the factory to check the function and performance of the watch, their actual life once in your possession may be less than the specified period. Please note that frequent use of electro luminescent backlight will shorten the battery life.

Be sure to replace the batteries to prevent any possible malfunction as soon as any of them runs down. To replace the batteries, we recommend taking the watch to a local watch retailer. At that time, notify the service provider of the location of the two batteries as instructed below.

Location of the batteries


When you open the battery cover, you will see the first battery for the electro luminescent backlight beneath the battery cover. Subsequently, when you remove the insulator beneath the first battery, you will find the second battery for analogue quartz movement.

Cal. 2020

The watch is powered by one lithium battery CR2032 for both the analogue quartz movement and the electro luminescent backlight with 5-year battery life. You will see the battery when you open the case back cover.

■ CARE OF YOUR LORUS WATCH

• BATTERY

| | |
|---|---|
|  | CAUTION Do not expose the old battery to fire or recharge it. Keep it at a place beyond the reach of children. If a child swallows it, consult a doctor immediately. |
|---|---|

• WATER RESISTANT

| Condition of use Indication on the dial/ case back | Accidental contact with water, such as splashes and rain | Swimming and taking a shower | Skin diving | Scuba diving |
|--|--|------------------------------|-------------|--------------|
| No Indication | NO | NO | NO | NO |
| WATER RESISTANT | YES | NO | NO | NO |
| WATER RESISTANT* (50M/5 BAR) | YES | YES | NO | NO |
| WATER RESISTANT* (100M/10 BAR) or above | YES | YES | YES | NO |

- * If your watch is 200 M/20 BAR, 100 M/10 BAR or 50 M/5 BAR water resistant, it is so indicated on the dial/case back.
- Do not press the buttons or turn the crown when the watch is wet.
- If the watch is exposed to salt water, rinse it in fresh water and then wipe it thoroughly dry.

Caution:

Leather straps are not water resistant except so indicated, even if the watch head is water resistant.

• ALLERGIC REACTION

Because the case and band touch the skin directly, it is important to clean them regularly. If not, shirt sleeves may be stained and those with delicate skin may develop a rash. Please wear the watch with some play to avoid any possible allergic reaction. If you develop a rash on your wrist, stop wearing and consult a physician.

• MAGNETISM

Your watch will be adversely affected by strong magnetism. Keep it away from close contact with magnetic objects.

• SHOCKS AND VIBRATIONS

Your watch may be worn for normal sports activities, but be careful not to drop it or hit it on hard surfaces.

• TEMPERATURE

Your watch is preadjusted so that constant accuracy may be insured at normal temperature.

■ SERVICE

When your LORUS watch requires repair or servicing, please see the enclosed WARRANTY/GUARANTEE.